

MANIFOLD FOR ADDITIONAL SINGLE ACTING CIRCUIT

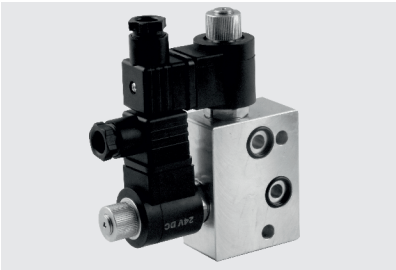

ASSEMBLY CODE - example

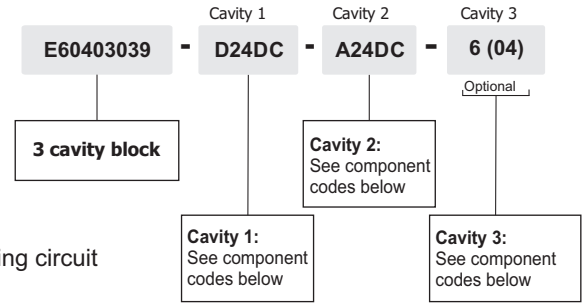

Dimensions in mm (inches)


Typically used to create a single acting circuit in parallel with a double acting circuit


Main features


Max pressure	350 bar
Weight	0,39 Kg (0,88lb)
Fixing bolts	2 M8 tie - rods steel class 8.8 or above

Spare part code
E60403039
E60403039US*

Application example

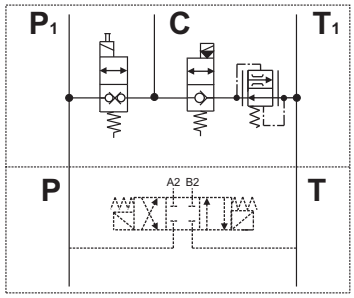


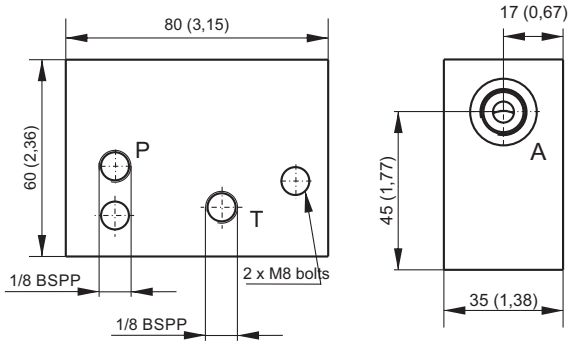

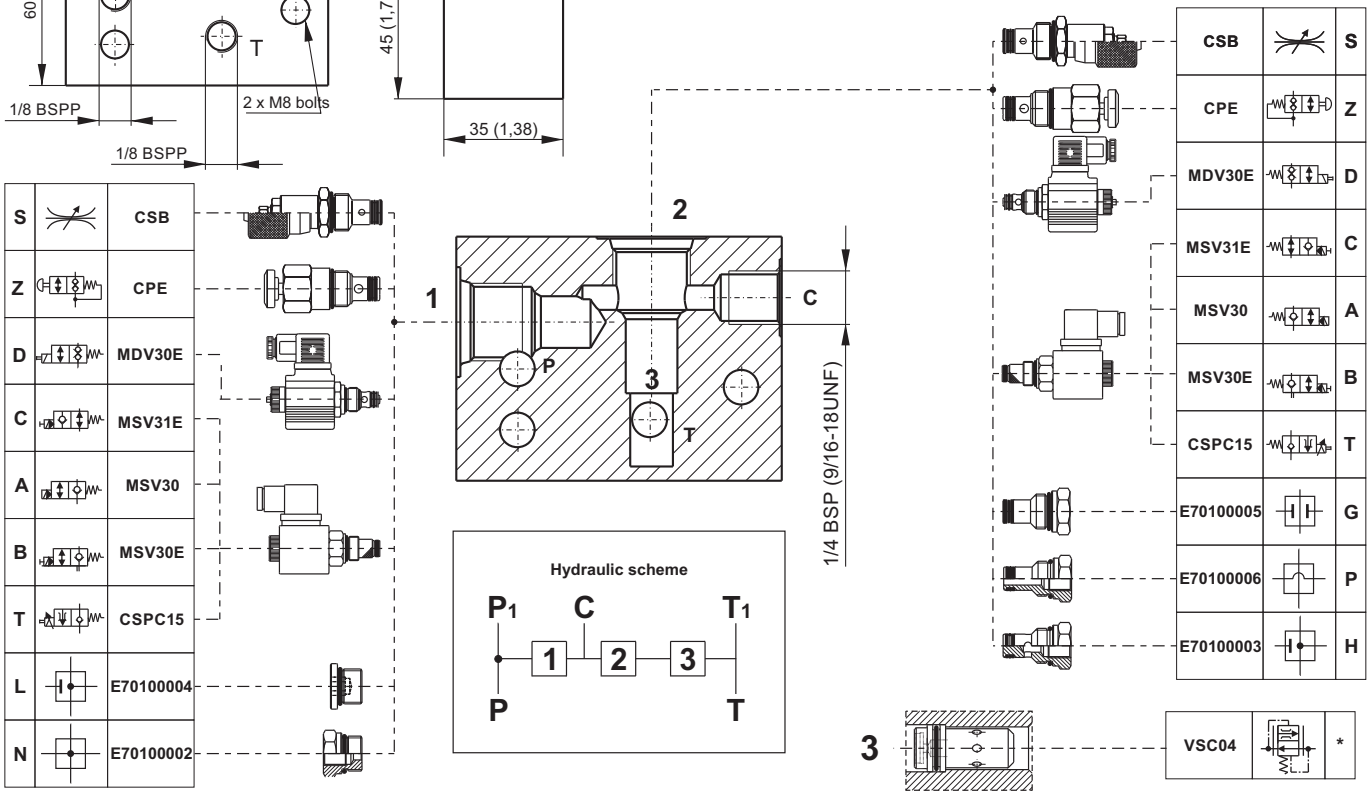


Note: to add external manifolds to PPC assembly code, just add their spare part codes at the end of the PPC code.
Example: PPC-0,8 12DC-UA-J-G1,1-V200-G-RETURN KIT-G-1,5L+**E60403039-D24DC-A24DC-6(04).**
The valve attachment is on the motor side. With AC motor frames bigger than 71 and DC motors bigger than dia. 125, always add a spacer manifold (see E60403004 code in F section) below the modular block to avoid interference between the valve and the motor.
Recommended tightening torque for M8 bolts: 16 Nm. Attention! Do not use tie-rods less than 8.8.

MANIFOLD FOR ADDITIONAL SINGLE ACTING CIRCUIT

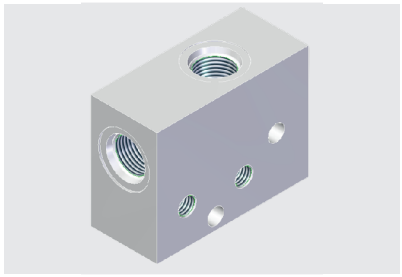

ASSEMBLY CODE - example

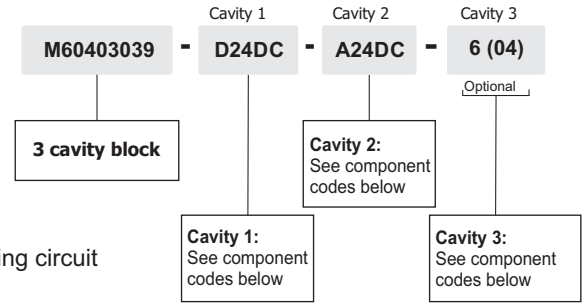

Dimensions in mm (inches)


Typically used to create a single acting circuit in parallel with a double acting circuit


Main features


Max pressure	350 bar
Weight	0,39 Kg (0,88lb)
Fixing bolts	2 M8 tie - rods steel class 8.8 or above

Spare part code
M60403039
M60403039US*

Application example

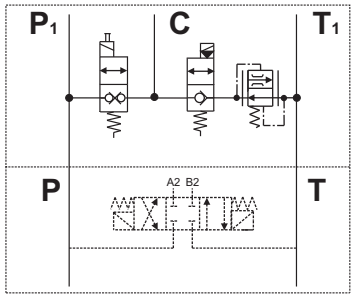

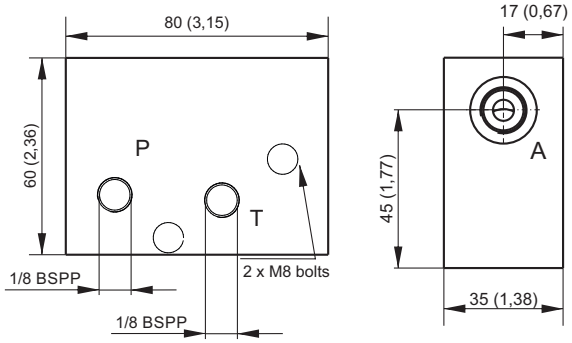

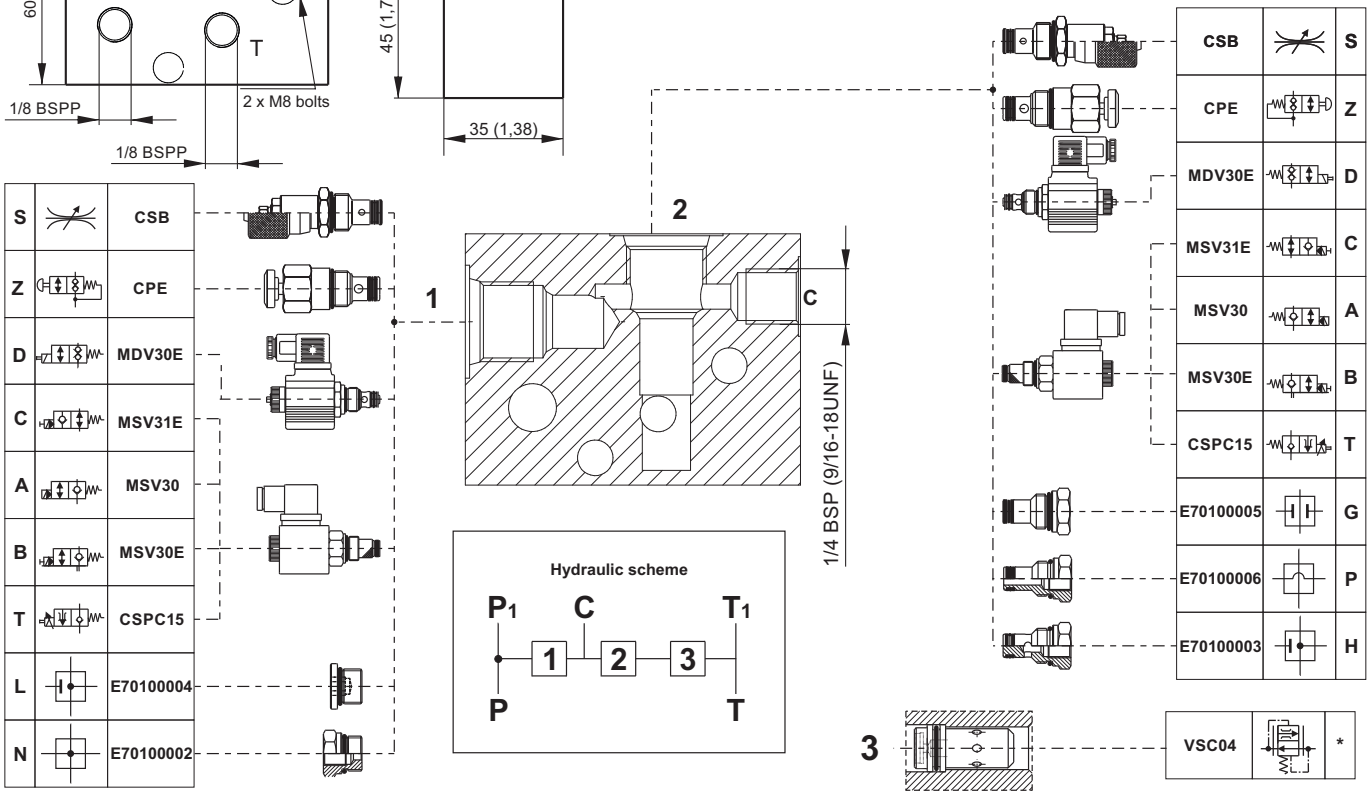

Note: to add external manifolds to PPC assembly code, just add their spare part codes at the end of the PPC code.
Example: PPM-0,8 12DC-MB-JM-G0,1-DM_280-G-RETURN KIT-G-1,5L+**M60403039-D24DC-A24DC-6(04).**
The valve attachment is on the motor side. With AC motor frames bigger than 71 and DC motors bigger than dia. 125, always add a spacer manifold (see E60403004 code in F section) below the modular block to avoid interference between the valve and the motor.
Recommended tightening torque for M8 bolts: 16 Nm. Attention! Do not use tie-rods less than 8.8.